

Sandberg®
ACTIVE

Survivor Powerbank 7in1 76800

Quick guide 


421-15



International:
www.sandberg.world/mt/manual/421-15

www.sandberg.world


Overview

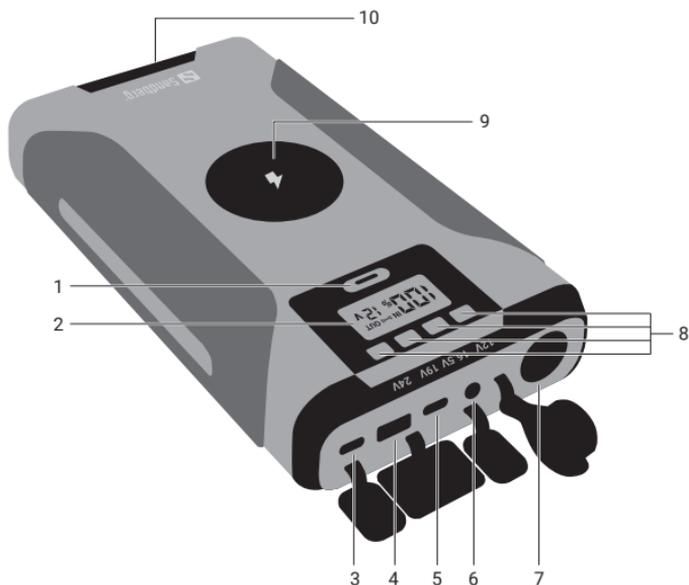

1. Power button
2. LED Display
3. USB-C 1 Input/Output
4. USB-A Output
5. USB-C 2 Output

6. DC Input/Output
7. 12V Car lighter output
8. Laptop Voltage button
9. Wireless charging Area
10. Flashlight

Detailed specification

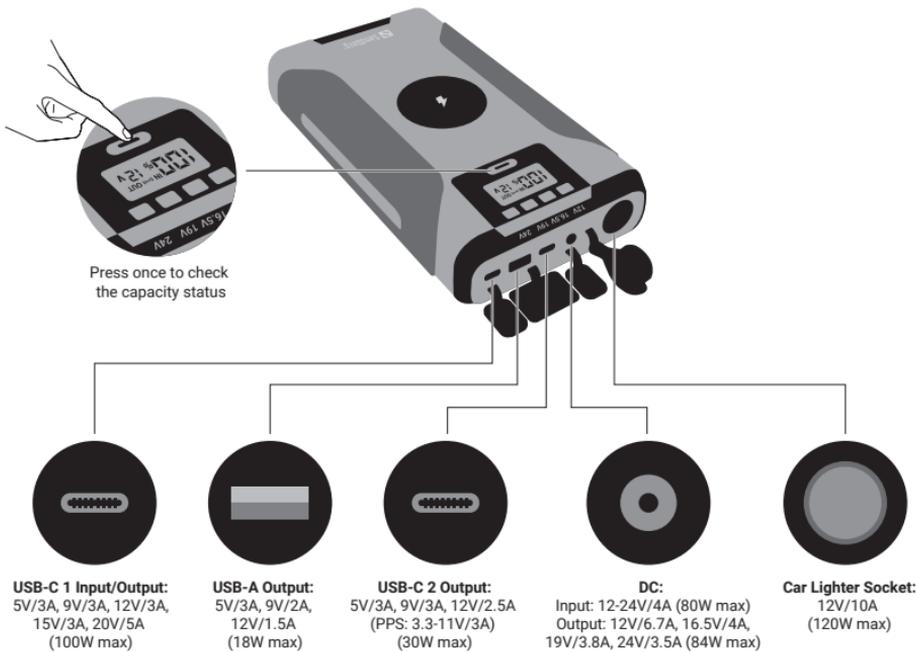

NOTE: The powerbank doesn't support charging of low power consuming devices such as earphones. The powerbank will turn off automatically, and the device will not be charged.

Charge the powerbank




USB-C Input:
PD

DC/PD Input



DC Input:
12-24V/4A
(80W max)

Charging indicator

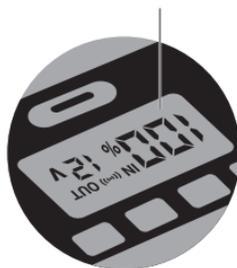


Solar Panel
Charger




Wall
Charger

Charge mobile device (USB-A and USB-C 2 Output)

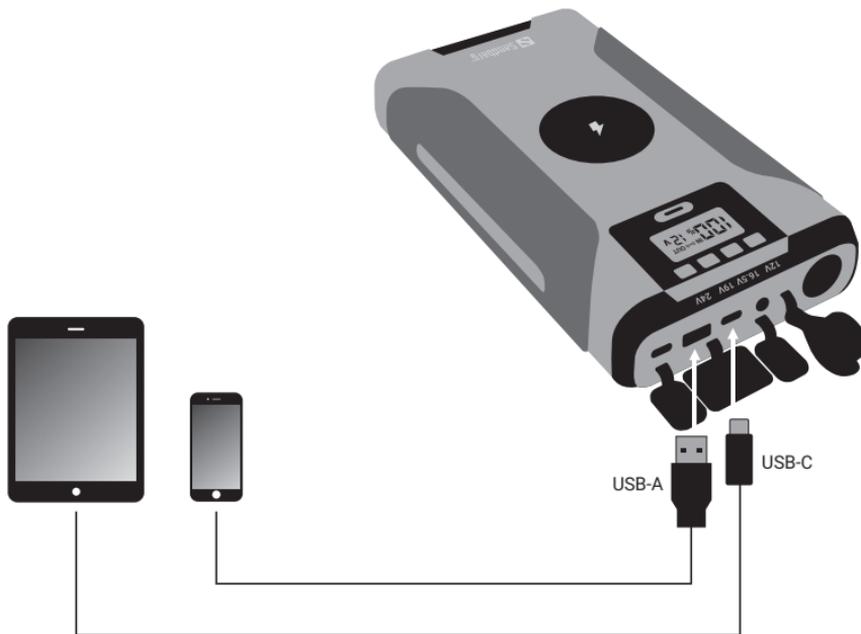

Charge equipment (Car Lighter Socket)

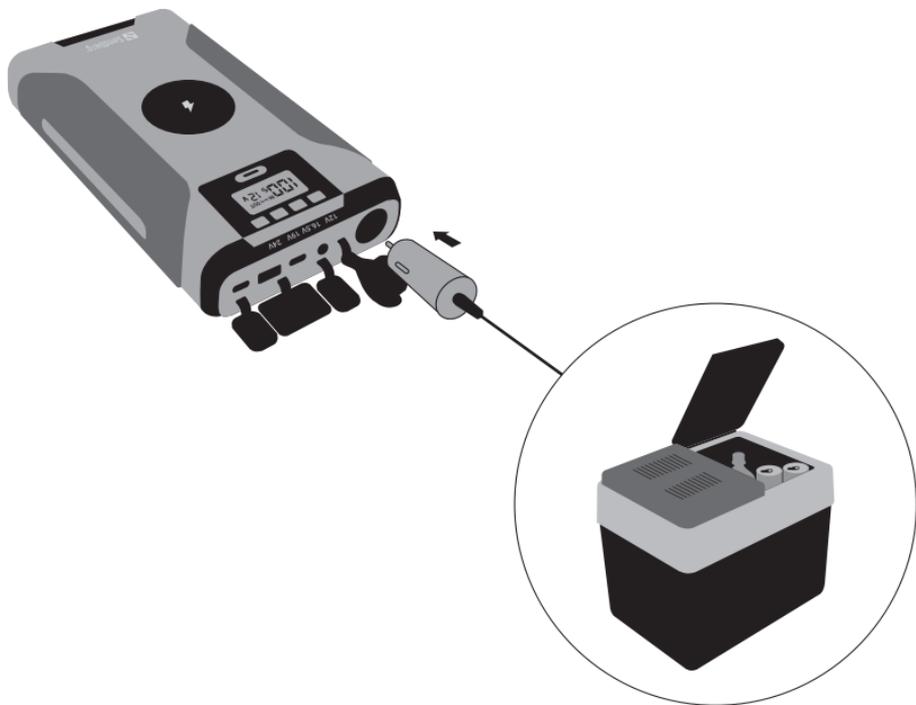


Charge laptop (DC or USB-C 1 Output)



Charging a laptop with DC cable - important note

1. Choose correct tip to fit the DC port of your laptop.
2. Set the correct voltage on the power bank:
Keep long press on the button until DC output is displayed.

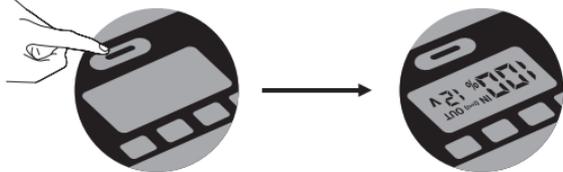


Click button short to step between Voltage 12V/16.5V/19V/24V.



3. Connect the laptop, charge will start.
4. After disconnecting the laptop, you need to set the Voltage next time.
For safety it will always start the cycle at lowest setting 12V.

NOTE: If you are in doubt on what DC-Voltage to choose, have a look at the label on the AC charger for the laptop.


Wireless charger

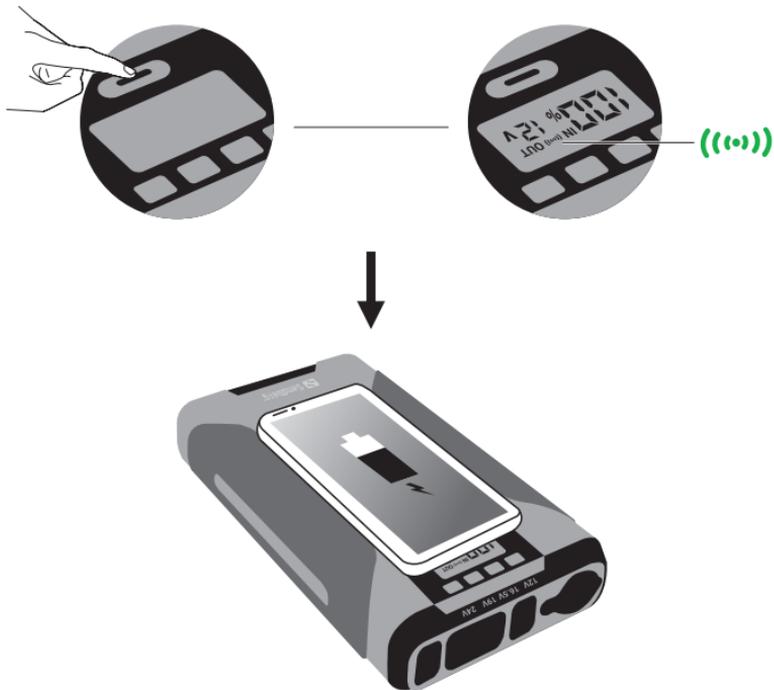


Flashlight




1. Press twice

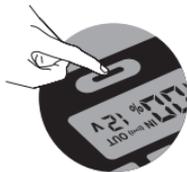

2. Press once more for weak light

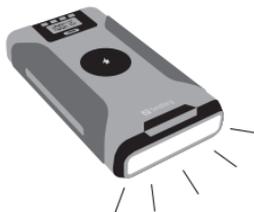

3. Press once more for SOS (slow flashing)

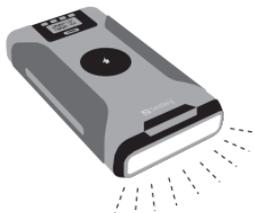



4. Press once more for SOS (fast flashing)



5. Press twice



Warranty

There is a five-year warranty on your Sandberg product.
Please read the warranty terms and register your new Sandberg product at www.sandberg.world/warranty

5
Years
Warranty

Survivor Powerbank 7in1 76800

Item no. 421-15

Battery capacity: 3.6V/76800 mAh/276.48 Wh

Battery pack capacity: 14.4V/19200 mAh/276.48 Wh

Battery type: Li-Ion

DC-port input: 12-24V/4A (80W max)

DC-port output: 12V/6.7A, 16.5V/4A, 19V/3.8A, 24V/3.5A (84W max)

USB-A output: 5V/3A, 9V/2A, 12V/1.5A (18W max)

USB-C PD input/output 1: 5V/3A, 9V/3A, 12V/3A, 15V/3A, 20V/5A (100W max)

USB-C PD output 2: 5V/3A, 9V/3A, 12V/2.5A (PPS: 3.3-11V/3A) (30W max)

Cigar Lighter Socket: 12V/10A (120W max)

Wireless charger: 15W (max)

Product weight: 1521g

www.sandberg.world info@sandberg.world

Sandberg A/S

Bregnerødvej 133D,

3460 Birkerød, Denmark



Made in China

PLEASE READ

This battery stays on in DC mode to ensure constant power.

When not in use, hold the power button for 3 seconds to turn it off.

If left on, the battery may slowly drain. Then recharge it when needed.

NOTE: If not used regularly, please recharge the powerbank at least every 3 months to maintain optimal performance.

